


CIRCUS, BIG SHOW Playfield Chart

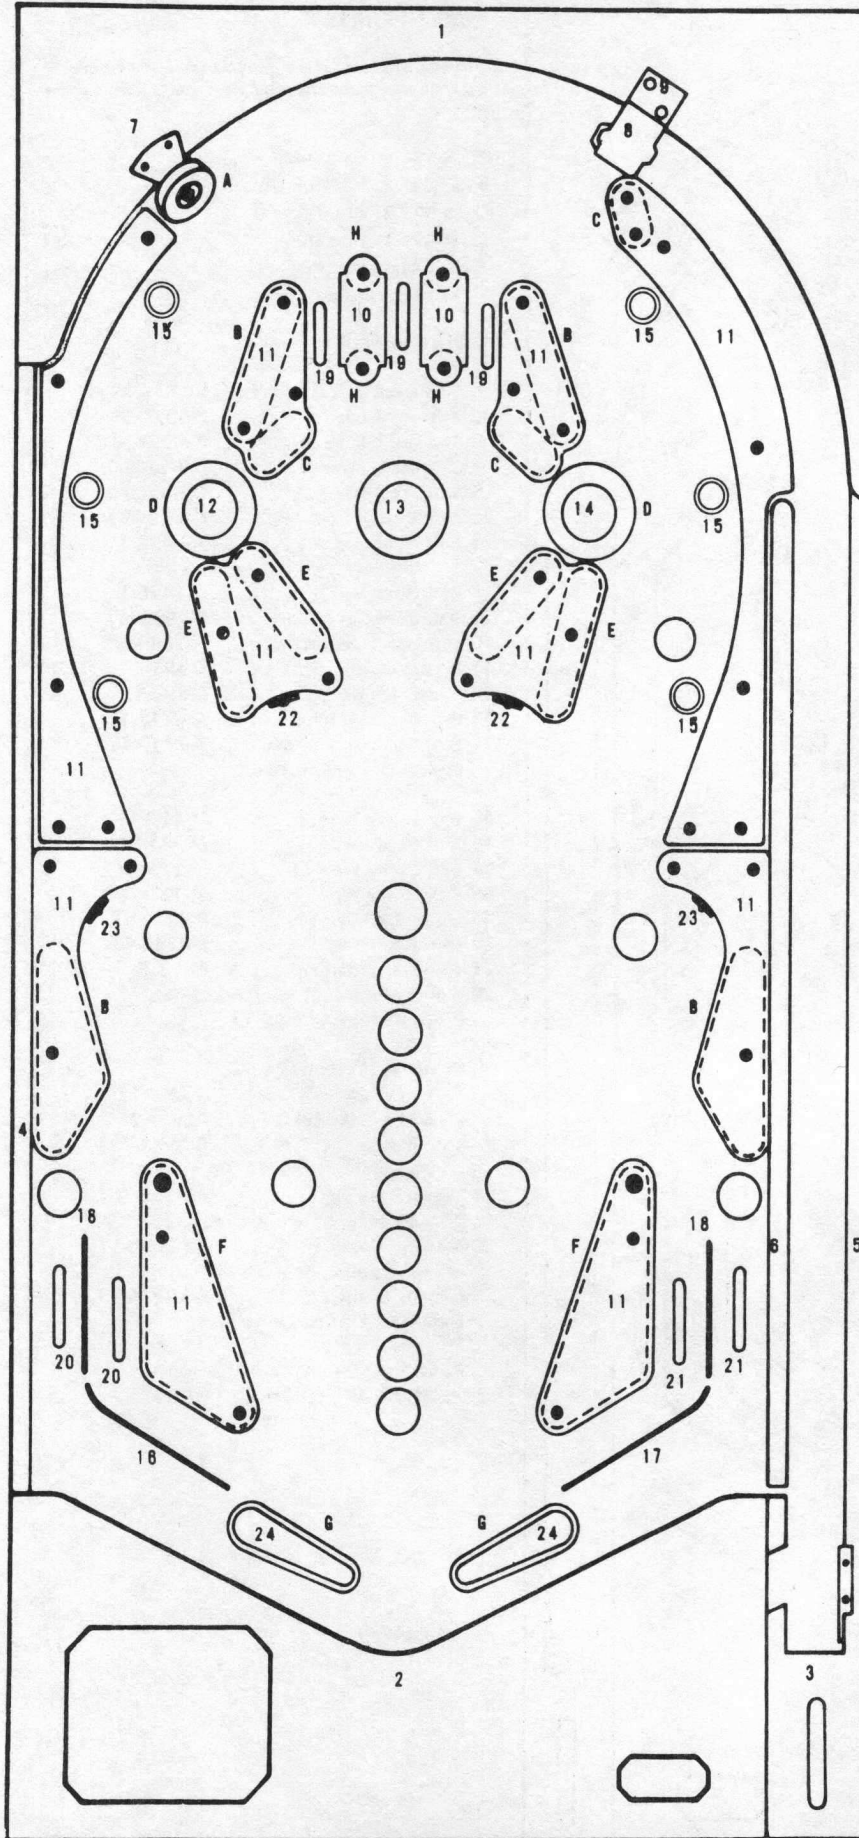

RUBBER PARTS

Dimensions are inside diameters. Numbers in parentheses indicate quantity used, if in excess of one.

- A R-115-4, Rebound
- B R-521-3, 2 in. (4)
- C R-521, 3/4 in. (3)
- D R-521-1, 1 in. (2)
- E R-521-2, 1-1/2 in. (4)
- F R-521-5, 3 in. (2)
- G R-406-3, Flipper (2)
- H R-243, 5/16 in. (10)

- 1 Top Arch P-5839-53
- 2 Bottom Arch P-5871-38
- 3 Shooter Gauge P-6359-10
- 4 Side Rail, left CA-1208-2
- 5 Side Rail, right CA-1208-1
- 6 Inside Rail CA-1208-14
- 7 Rebound Assy AS-493-3

Detailed, item 8, page 125

- 8 Ball Gate A-1475-1
- 9 Ball Gate Cover P-2896-5
- 10 Plastic Ball Guide (2) C-695-1
- 11 Light Shields, set A-2890-91
- 12 Bumper Cap, red A-3738-1

For components related to item 12, see item 14 below

- 13 Thumper Bumper Cap, green. A-3713-15
- Details of Thumper Bumper Assys., page 167

- 14 Bumper Cap, orange A-3738-2

Bumper Assy., on which items 12, 14 are used

- AS-2222-5
- Base C-115-1
- Body C-114
- Rubber Ring R-521-1
- Skirt C-116-3
- Spring SP-200-177

Components used with above Assy., but not included in the Assy.

- Lamp E-125-22
- Lamp Socket E-120-25
- Switch & Bracket Assy. AS-982-902
- Bracket P-126-29
- Switch ASW-A1-89
- Switch Plate,

- Flat P-126-154
- Spring P-137-5

- Switch Screw (2) .. MSSR-00540-1108

- 15 Rollover Button (6) C-387-5

For components used with item 15 see item 14, page 127

- 16 Ball Guide Wire M-121-43
- 17 Ball Guide Wire M-121-44
- 18 Ball Guide Wire (2) M-121-45
- 19 Rollover Wire (3) M-1336-10
- 20 Rollover Wire (2) M-1336
- 21 Rollover Wire (2) M-1336-1

- 22 Target Assy. (2) AS-982-807

- Bracket P-126-471

- Switch Assy. A-3359-8

- Switch Plate,

- Flat P-126-155

- Spring P-137-5

- Switch Screw MSSR-00540-1111

- 23 Target Assy. (2) AS-982-818

Same as Item 22, above, excepting

- Switch Assy. A-3359-7

- Switch Screw (2) MSSR-00540-1110

- 24 Flipper (2) C-611-5

Details of Flipper Units,

page 175

● INDICATES MOVEABLE POSTS FOR SCORING ADJUSTMENTS